

INTACT

FRAGILE

DAMAGED

Original Chain

(Premium) or (Tornado)

Cyclone Chain (Premium)

Smart Spider+

Original Chain

(Premium) or (Tornado)

Twister Metal Grinder*

DRAIN CLEANING QUICK GUIDE

MAXI MILLER POWER+

Cast Iron Pipes

D Ε S С Α L Ν G

S Ρ Ε С Α

С

0

Α Ρ

S Ε


D







FULL

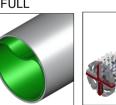


PARTIAL

"RHUBARB"



Smart Crusher+

Smart Crusher+

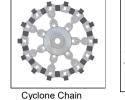

(Premium) or (Tornado)


Smart Spider+

Smart Cutter[™]+


Cyclone Chain

(Premium) or (Tornado)

Smart Cutter[™]+

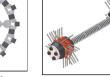

Smart Spider+

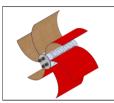


Smart Cutter[™]

Smart Crusher+

*Twister Metal Grinder :

requires18/12mm shaft

connector(3/4"-1/2")

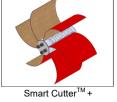



Smart Sweeper+ (with Drill Head)

Maxi Miller Power+

Shaft Diameter: 18mm (3/4")

Range: 18 metres (60ft)


Additional Extension**: 11 metres (36ft)

**Can be used with 2 shaft extensions sold separately.

Recommended Diameter Range:

DN100 (4") Straight Pipes Only DN150 (6") - DN300 (12") **Power Supply:**

3-Phase, 400-480V, EU/UK: 16A USA:30A




Smart Crusher+

Smart Crusher+

(with Drill Head)









Smart Sweeper+

(with Crusher Head)








Cyclone Chain (Premium)



Smart Cutter[™] +



Smart Cutter[™] +







(with Drill Head)



Ε R

С 0 Ν С R Ε Т Ε





FULL



Twister Concrete Remover+



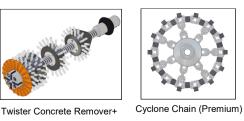



Smart Cutter[™] +

Smart Cutter[™] +

Cyclone Chain (Premium) Smart Sweeper+ (with Drill Head)

Maxi Miller Power+	
Available Tools Size	e Range
Original Chain (Tornado) DN100 (4") - DN300 (12")	
Original Chain (Premium)	DN100 (4") - DN300 (12")
Cyclone Chain (Tornado) DN150 (6") - DN300 (12")	
Cyclone Chain (Premium)	DN100 (4") - DN300 (12")
Smart Spider+	DN150 (6") - DN225 (9")
Smart Crusher+	DN70 (3")** - DN225 (9")
Smart Sweeper+	DN150 (6") - DN225 (9")
Smart Cutter [™] +	DN100 (4") - DN300 (12")
Twister+	DN150 (6") - DN300 (12")
Twister Concrete Remover+	DN150 (6") - DN225 (9")
Twister Metal Grinder*	DN100 (4")
** 70mm (3") is suitable for DN100 (4") pipes and above	

Please refer to your user operating manual before undertaking any work. Ask your reseller or contact Picote for further information. www.picoteinstitute.com